

Immobiliser Function List

Software Version: 26.32

Automaker	Model/Protocol	System	Function
GREATWALL		Read security code	1.STEC immobiliser system 2.DIAS immobiliser 3.HELP
GREATWALL	1.Hover H1 2.Hover H6 3.Hover M1 4.Hover M4 5.Gwperi 6.Florid 7.Lingao 8.C10 9.C20R 10.C30 11.C50	STEC Immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GREATWALL	1..Hover H2 2..Hover H6 COUPE	Keyless start system(PEPS)	1.Key learning (offline) 2.Key learning (sale) 3.Aftermarket Learning 4.Clear learning state (1)Clear ESCL learning state (2)Clear EMS learning state (3)Clear CAPE learning state

GREATWALL	1..Hover H3 2..Hover H5 3.Cowry 4.Fengjun 5.Fengjun 6 6.V80	Delphi Petrol Immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Input security code (2)Set security code 6.Program function (1)Program new system (2)Replace immobiliser ECU (3)Replace engine ECU (4)Program keys (5)Program engine VIN (6)Program immobiliser VIN (7)Reset engine ECU (8)Reset immobiliser (9)Erase keys
GREATWALL	1..Hover H3 2..Hover H5 3.Fengjun	Delphi Diesel (Bosch 2.8TC) Immobiliser system	1.Fault codes 2.Erase DTC 3.Live data 4.Set security code (1)Input security code (2)Set security code 5.Program function (1)Program new system (2)Replace immobiliser ECU (3)Replace engine ECU (4)Program keys (5)Program engine VIN (6)Program immobiliser VIN (7)Reset engine ECU (8)Reset immobiliser (9)Erase keys<ACT9> 6.Read engine VIN
GREATWALL	1..Hover H3 2.Hover H5	Remote	1.Program remote

GREATWALL	1.Hover H5 2.Fengjun 3.Fengjun 6	Delphi Diesel (Delphi 4D20) Immobiliser system/Delphi Diesel (Bosch 4D20) Immobiliser system	1.Live data 2.Set security code (1)Input security code (2)Set security code 3.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace engine ECU (5)Replace immobiliser ECU (6)Program engine VIN (7)Program immobiliser VIN (8)Reset engine ECU (9)Reset immobiliser
GREATWALL	1.Hover H6 2.C30 3.C50	Tung Thih Immobiliser	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Program function (1)Replace engine ECU (2)Replace immobiliser ECU (3)Add a new keys (4)Re-program keys (5)Erase keys (6)Reset immobiliser (7)Reset engine ECU (8)Program VIN (9)Check key (10)Lock immobiliser

GREATWALL	1.Hover H6 2.C30 3.C50	Smart key system	1.Live data 2.Replace PEPS (1)Erase K-SK, relearn keys (2)Solenoid Valve Replacement (3)ECU data Writes to PEPS 3.Replace EMS 4.Program smart keys 5.Solenoid Valve Replaceme 6.EOL mode learning (1)Match PEPS and EMS (2)Not Erase K-SK, relearn keys
GREATWALL	1.Hover H1 2.Hover H6 3.Fengjun 6 4.C30 5.C50	Remote	1.Program remote
GREATWALL	1.Hover H8 2.Hover H9	Smart key system	1.Live data 2.Replace PEPS (1)Erase K-SK, relearn keys (2)Solenoid Valve Replacement (3)ECU data Writes to PEPS 3.Replace EMS 4.Program smart keys 5.Solenoid Valve Replacement 6.EOL mode learning (1)Match PEPS and EMS (2)Not Erase K-SK, relearn keys

GREATWALL	1.Hover M2 2.Coolbear	DIAS Immobiliser	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Program function (1)Add a key (2)Erase keys (3)Program new system (4)Replace immobiliser ECU (5)Replace engine ECU (6)Reset immobiliser (7)Reset engine ECU (8)Read VIN (9)Check key (10)Check engine ECU (11)Program engine VIN (12)Program immobiliser VIN (13)Lock immobiliser 6.Actuation test (1)LED status
GREATWALL	Fengjun	Delphi Petrol Immobiliser system(DIAS)	1.Live data 2.Set security code (1)Input security code (2)Set security code 3.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace engine ECU (5)Replace immobiliser ECU (6)Program engine VIN (7)Reset engine ECU (8)Reset immobiliser

GREATWALL	Fengjun	Delphi Immobiliser system(Bosch EDC17C63)	<ul style="list-style-type: none">1.Live data2.Set security code<ul style="list-style-type: none">(1)Input security code(2)Set security code3.Program function<ul style="list-style-type: none">(1)Program new system(2)Program keys(3)Erase keys(4)Replace engine ECU(5)Replace immobiliser ECU(6)Program engine VIN(7)Reset engine ECU(Pre-cooled models only)(8)Reset immobiliser
-----------	---------	--	--