

Immobiliser Function List

Software Version: 26.21

Automaker	Model/Protocol	System	Function
GEELY	Geely(Ziyoujian)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Geely(Yuanjing)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Geely(Jinying)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Quanqiuying(Panda)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Quanqiuying(GC7)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Quanqiuying(GX7)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Quanqiuying(GX7)	HELLA smart key system	1.Read ecu status 2.Program smart keys
GEELY	Quanqiuying(GX7)	LEAR body system	Program remote
GEELY	Emgrand(EC7)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Emgrand(EC7)	DALU smart key system	1.Add a smart key 2.Add two smart keys 3.Erase all smart keys then add a smart key 4.Erase all smart keys then add two smart keys
GEELY	Emgrand(EC8)	STEC immobiliser system(EC820)	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Emgrand(EC8)	Mitsubishi immobiliser(EC820)	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser
GEELY	Emgrand(EC8)	LEAR body system(KWP)(EC820)	Program remote
GEELY	Emgrand(EC8)	LEAR body system(CAN)(EC820)	Program remote
GEELY	Emgrand(EC8)	UAES body system(CAN)(EC820)	Program remote

GEELY	Emgrand(EC8)	STEC immobiliser system(EC825)	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Emgrand(EC8)	Mitsubishi immobiliser(EC825)	1.Fault codes 2.Erase DTC 3.Live data 4.Program keys 5.Reset immobiliser
GEELY	Emgrand(EC8)	HELLA smart key system(EC825)	1.Read ecu status 2.Program smart keys
GEELY	Emgrand(EC8)	LEAR body system(KWP)(EC825)	Program remote
GEELY	Emgrand(EC8)	LEAR body system(CAN)(EC825)	Program remote

GEELY	Emgrand(EX8)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Emgrand(EV8)	HELLA smart key system	1.Read ecu status 2.Program smart keys
GEELY	Emgrand(FC-2)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Huapu	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Yinglun(SC515)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser

GEELY	Yinglun(SC6)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Yinglun(SC6)	Steel Mate	1.Read matching results 2.Reset PEPS host 3.Reset locks the unit 4.New system matching 5.Replace the locks matching 6.PEPS host matches 7.Remote control key match

GEELY	Yinglun(SC7)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Yinglun(SX7)	STEC immobiliser system	1.ECU identification 2.Fault codes 3.Erase DTC 4.Live data 5.Set security code (1)Set security code (2)Input security code 6.Program function (1)Program new system (2)Program keys (3)Erase keys (4)Replace immobiliser ECU (5)Replace engine ECU (6)Program immobiliser VIN (7)Program engine VIN (8)Reset engine ECU (9)Reset immobiliser
GEELY	Yinglun(SX7)	HELLA smart key system	1.Read ecu status 2.Program smart keys
GEELY	Yinglun(SX7)	LEAR body system(KWP)	1.Program remote